

Nicopress Crimp Instructions



Step 1: Make sure you are using the proper sleeve size the you wire rope selection.

Step 2: Slide one end of the wire through the sleeve.

Step 3: Place the proper sized thimble to create the eye.

Step 4: Place the end of the wire back through the sleeve.

Step 5: Slide the sleeve until it is snug against the thimble.

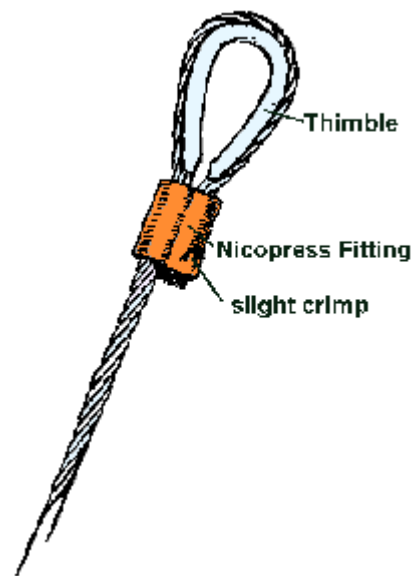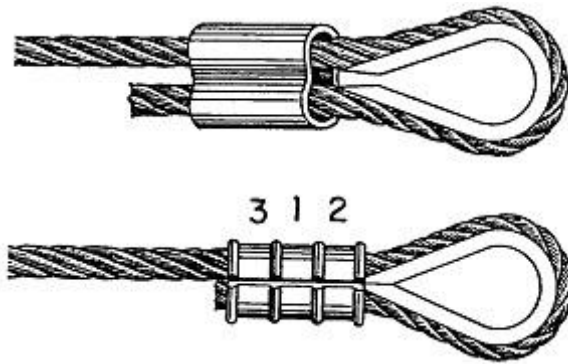

DO



DON'T

Number of Crimps		
Cable Diameter		
	Oval Sleeves	Stop Sleeves
3/64"	2	1
1/16"	2	1
3/32"	2	2
1/8"	3	2
5/32"	3	2
3/16"	4	2
7/32"	4	2
1/4"	4	3
9/32"	4	3